

Type: P50ELR* & P50ELR*/2

Earth Leakage Relay - Type A

* -3. -10 or -30

Terminal Protection




Panel (Flush) Mount enclosure

Adjustable side clips provide quick method of mounting (no fixing screws required)

6 models available (3A, 10A or 30A with either SPDT or 2 x N.O. relay outputs)


- Designed to monitor and detect true RMS leakage current in conjunction with separate toroid
- □ Adjustable Trip level (I∆n) and Time delay (∆t) settings
- Separate "Test" and "Reset" push buttons
- Toroid open and short-circuit detection forces unit to trip (Red LED flashes during this condition)
- □ Relay energises when fault current exceeds set Trip level
- □ LED indication for Power Supply, Leakage Current and Trip status
- □ SPDT relay output 8A (Part No. P50ELR-3, P50ELR-10 and P50ELR-30)
- □ 2 x N.O. relay outputs 3A (Part No. P50ELR-3/2, P50ELR-10/2 and P50ELR-30/2)
- □ Single supply voltage option 115V or 230V AC
- □ Compliant with IEC 60755

FUNCTION DIAGRAM

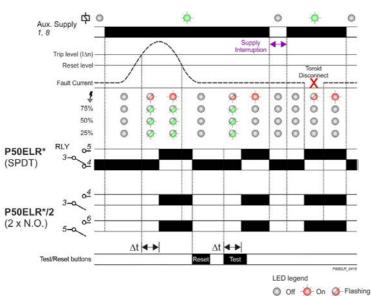


SETTING DETAILS

- 1. Trip setting adjustment (I Δ n) in Amps
- 2. Time delay adjustment (Δt) in seconds
- 3. "TEST" button
- 4. Green "Power On" (Normal) LED indication
- 5. Green "Leakage Current" LED indication
- 6. Red "Tripped" (Fault) LED indication
- 7. "RESET" button

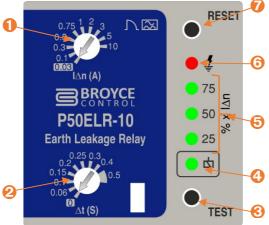

P50ELR-10 shown in example

INSTALLATION AND SETTING

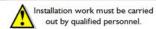

- BEFORE INSTALLATION, ISOLATE THE SUPPLY.
- Remove the P50ELR from the packaging.
- Lift the raised part of the side clip and slide towards the rear of the housing to remove. Carry this out on both sides.
- Insert the P50ELR in to the panel cut-out and fit the side clips back on to the housing.
- Slide the clips towards the front of the unit until they come in to contact with the reverse side of the panel. The unit is now secured in place.
- Connect the wires to the rear terminals as required following the diagram shown on the next page and for the relevant model shown.
- Ensure the Auxiliary supply voltage to be connected to terminals 1 and 8 matches the rating of the product.

Setting up

 The unit should be set according to the requirements of the application.

Applying power

- Apply power and the green "Power on" 4 LED will illuminate.
- Assuming no fault present, the output relay(s) will remain in the deenergised state.
- Prior to a fault occurring, the LED bargraph will indicate the % of I∆n being detected (the display is scaled between 25, 50, and 75% of the actual trip level). After all 3 LED's have illuminated and the unit trips due to an excessive fault current, the red "tripped" LED will illuminate.

Fault simulation (Test mode)

- The unit can be placed into a fault condition by pressing the "Test" button on the front of the unit. The output relay(s) will energise.
- Press the "Reset" button on the front to reset the unit. The output relay(s) revert back to the de-energised state.
- The unit can also be reset by interrupting the power supply.
- To satisfy regulations, it is recommended that the device be tested periodically to ensure correct operation.

Troubleshooting

 If the unit fails to operate correctly check that all wiring and connections are good.

Note

The operating function of this unit is classed as a **Type A** for which tripping is ensured for residual sinusoidal alternating currents and residual pulsating direct currents, whether applied suddenly or slowly rising. Additionally, this unit is protected against nuisance tripping.

This unit will also satisfy the requirements for **Type AC** devices which only need to detect residual alternating currents.

P50ELR*/2



TECHNICAL SPECIFICATION

Auxiliary Power Supply (1, 8) Supply voltage (Un):

115V or 230V AC (To be specified when ordering)

Frequency range: 50/60Hz

Supply variation: 85 - 115% of Un Auxiliary supply is galvanically isolated from the Toroid connections

Overvoltage category:

Rated impulse withstand voltage 4kV (1.2/50μS) IEC 60664

Power consumption (max.): 6VA

Device Characteristics

Unit classification: Type A Measurement principle: True R.M.S. Trip level [Sensitivity] settings (I Δ n): S

P50ELR-3:

30mA, 50mA, 100mA, 200mA, 300mA, 500mA, 1A, 1.5A, 2A,

30mA, 100mA, 300mA, 500mA, 750mA, 1A, 2A, 3A, 5A, 10A 30mA, 300mA, 500mA, 1A, 3A, 5A, 10A, 15A, 20A, 30A P50FI R-10: P50ELR-30:

Trip level limits 80 – 90% of I∆n ~85% of tripped level

Reset value: Time delay [Operating time]

settings (Δt) 0*, 60, 100, 150, 200, 250, 300, 400, 500ms *Actual delay when set to "0" is <25ms @ 5 x I∆n

Note:

For $I\Delta n$ setting of 30mA, the time delay is fixed to 0s (instantaneous) and is not adjustable

(i.e. setting any other time delay has no effect)
The unit is factory set to 30mA and 0s (instantaneous) delay. Adjustment of these settings can be made if necessary to suit the requirements of the installation. Once the settings are made, the front window can be sealed if required to prevent unnecessary adjustment.

<2s (from supply interruption)

Monitored input (via external Toroid connected to terminals 2 and 7)

External Toroid ratio:

1000:1

Power Supply: 🛱 Green x1

LED flashes if the external toroid is Tripped: Red x 1

Press once to reset the unit

Bargraph (25, 50, 75%): Green x3

Test and Reset

"Test" method

(assuming unit is in the non-Press once to trip the unit tripped state):

"Reset" method

(assuming unit is in the tripped

state and fault current cleared):

Temperature rating


Operating: P50ELR* -20 to +60°C -20 to +55°C Storage: -30 to +70°C

Relative humidity: +95% max

Output - Model No./Type P50ELR* P50ELR*/2 (3, 4 / 5, 6) Rear Terminal No. (3, 4, 5)Contact arrangement 1 x SPDT 2 x SPNO AC1 (250V) 8A (2000VA) 3A (750VA) AC15 (250V) 2.5A 1.5A DC1 (25V) 8A (200W) 3A (75W)

Where * refers to product current rating, i.e. 3, 10 or 30

CONNECTION DIAGRAM

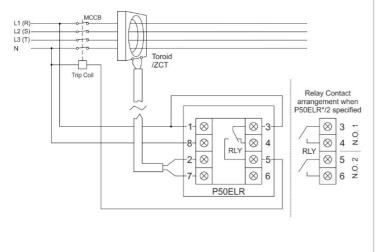

Output (continued) DC load capacity: Resistive Voltage (V) 250V AC 2 AC1 Switching current (A) DC current (A) P50FLR*

Dielectric voltage: Rated impulse withstand voltage: 1kV AC (rms) IEC 60947-1 4kV (1.2/50µS) IEC 60664

TECHNICAL SPECIFICATION (continued)

Housing Material

Grey flame retardant Lexan UL94 VO ≈ 205g Weight:

IP40 (front face) / IP20 (rear) Protection:

Panel mount. Cut-out (see information below)

Max. panel thickness 10mm

Rear Terminals

Conductor size 0.3 - 2mm2 (22 - 14AWG) Wire stripping length:

≈ 6mm 1.3Nm (12lb-in) Recommended tightening torque:

Standards

Product EMC: IEC 61543, IEC 61000-4 Series

CE and RoHS Compliant. C-tick

Toroid options

Part number:		Aperture	Internal diameter/size:	Rated current	
	BZCT035	0	35mm Ø	150A	
	BZCT050	0	50mm Ø	250A	
	BZCT070	0	70mm Ø	400A	
	BZCT120	0	120mm Ø	600A	
	B7CT160	0	160mm Ø	1000A	

Ordering:

Please specify product part number and voltage when ordering.

For example:

P50ELR-30 230V AC

CUT-OUT

